

# How to replace the nipple on a KORE tubeless wheel.



NIPPLE

LOCKRING

NIPPLE SEAT

WASHER



REMOVE LOCKRING WITH PLIERS **NOTE LOOSENING ROTATION IS CLOCKWISE!**



THROW OUT OLD PARTS



ASSEMBLE SPOKE + NEW NIPPLE + NIPPLE SEAT + WASHER + LOCKRING AS SHOWN



INSERT NIPPLE SEAT WITH RIM AND TURN NIPPLE SEAT 60° UNTIL ENGAGED



PULL ON SPOKE GENTLY TO KEEP NIPPLE SEAT ENGAGED WITH THE RIM



(OPTION) INJECT GREEN LOCTITE BETWEEN LOCKRING AND NIPPLE



FINGER TIGHTEN LOCKRING (NO TOOLS) TO NIPPLE SEAT IN ANTI-CLOCKWISE DIRECTION



ADD OIL BETWEEN THE NIPPLE AND NIPPLE SEAT. TRUE WHEEL NORMALLY